

## DANCING FLAME GLO GAUGE FACES

Please Note: There are 2 different types of controls for these faces. One is a keypad type with 4 symbols and the other is an oval shape control with a wheel on each side that controls the different settings.

Place microphone that is attached to power supply in a place where it can pick up sounds from your stereo.

FOR DRIVING SAFETY!!

DO NOT USE AUTOMATIC VOICE/MUSIC CONTROL MODE WHEN  
VEHICLE IS MOVING!

# INSTALLING YOUR NEW NR EL-GLO OVERLAY GAUGE FACES

NR AUTOMOBILE ACCESSORIES ASSUMES NO LIABILITY OR RESPONSIBILITY DUE TO IMPROPER INSTALLATION WHEN WIRING GAUGE FACES TO ELECTRICAL SYSTEM OF YOUR VEHICLE. IMPROPER INSTALLATION OF WIRING MAY RESULT IN POSSIBLE DAMAGE TO YOUR WIRING OR ELECTRICAL SYSTEM.

IT IS IMPERATIVE THAT YOU READ AND UNDERSTAND THE INSTALLATION INSTRUCTIONS PRIOR TO BEGINNING THE INSTALLATION. IF YOU ARE NOT CERTAIN REGARDING THE INSTALLATION, PLEASE HAVE THE WORK DONE BY A QUALIFIED SHOP.

After removing the cluster from the dash, please install according to the following directions:

1. Remove all light bulbs that do not light up symbols from rear of cluster. These EL-Glo faces have their own lighting source.
2. If you have a cluster that has backlit needles that illuminate at night, leave all light bulbs in cluster as this will allow your needles to glow at night. You may have to notch housing of cluster to enable wires from faces to come out of cluster.
3. Depress tabs that attach clear cover to gauge housing. You may want to use a flat bladed screwdriver.
4. If your cluster has several faces, fish the wire attached to the NR EL face through the bulb hole in back of cluster. Leave as much of the wire as possible, so the EL face can be moved when installing. If your cluster consists of 1 or 2 faces, the wires attached to the face will fit between the clear cover and gauge housing. Do not bend terminal attached to face as this can cause a break in the wires that illuminate the face.
5. Each face will have a large center hole that will allow you to position the face so the pointer will go through the center hole. Tuck the face under the head of the needle to allow hole to extend past the head of the needle. Push face down under needle and center. If you have screws in your face, they have to be removed and replaced after installing your EL-Glo faces. We provide 2- sided tape to hold faces in place.
6. Repeat process until all faces are installed.
7. Connect pigtail wires to inverter plug connectors for each face.
8. After all faces are installed in cluster, make sure speedo, tach and temp gauges are working properly by lifting needle half way up the scale and releasing it. Needle should drop to its original resting position. Gas gauge needle should be at its original place before white face is changed.
9. The red and black wires coming from the inverter are connected to 12V positive and negative wires. Do not connect inverter to any power source over 12V, as this will cause damage to the inverter. Inverter will not be replaced or warranted due to damage by improper wiring or attaching to voltage more than 12V. Connect to light switch or parking lamps.

## WARNING

- Do not tighten black screws too tight. This will cause damage to your EL-Glo faces.
- Do not drill, puncture or modify faces in any way.
- Do not fold gauge faces.
- Do not put a fold in any of the terminal tabs as this will damage the faces and they will not illuminate.

Enjoy your NR EL-Glo gauge faces. They will last for many years if installed properly.

NR AUTOMOBILE ACCESSORIES (818) 986-8881